


SCOUT 36 SAWHORSE (Applicable to TSB366-F1 and TSB366-AF1)

This manual is applicable to the Sawhorse Benchtop with either leg option:

- with Foldable Fixed Legs (TSB366-F1)
- with Foldable Adjustable Legs (TSB366-AF1)

IMPORTANT NOTES:

1. Before starting, make sure the two benchtop feet (approx. 3" x 6") on the underside of the sawhorse have been removed.
2. A 6 mm hex key is required and not included. Please have your own tools ready.

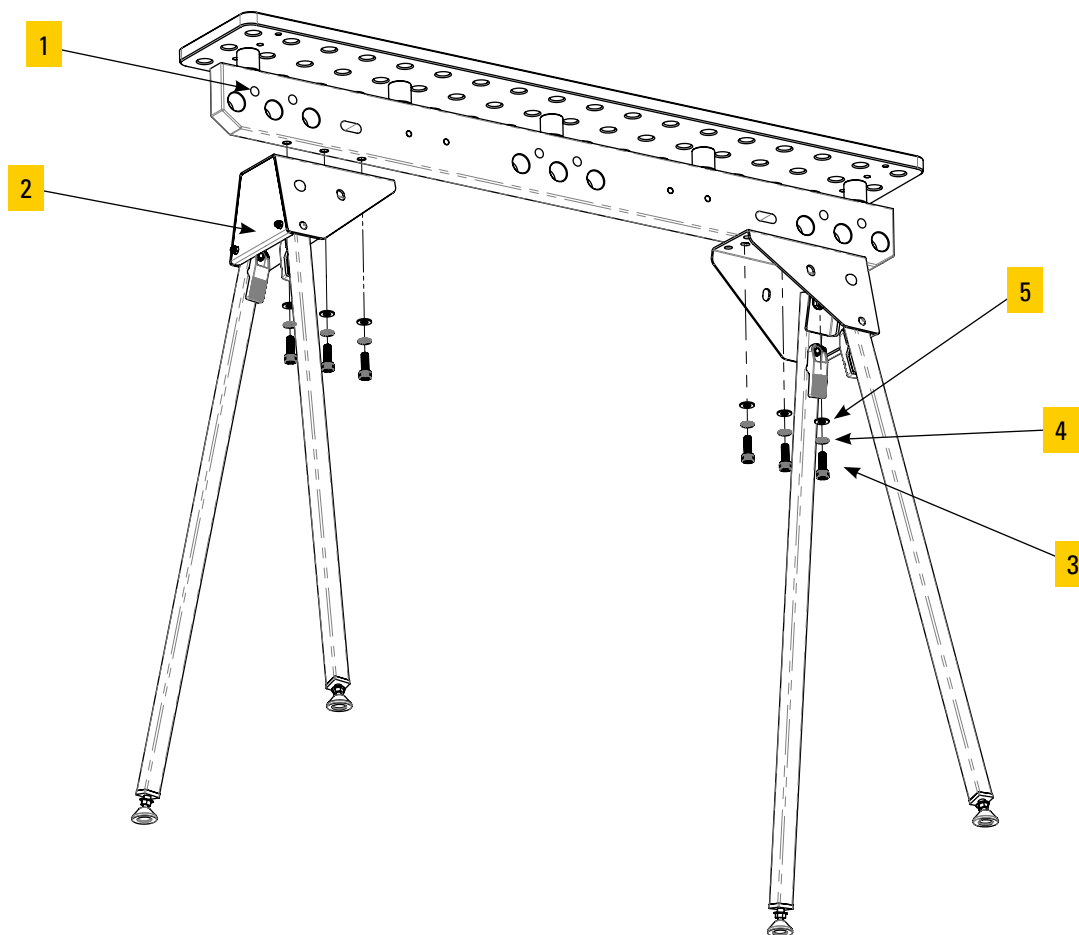

TSB366-F1:

#	Description	Qty.
1	36" x 6" Benchtop	1
2	Fixed Legs, collapsible	2
3	Socket Head Shoulder Screw, M8 x 20 mm	6
4	Split Washer, M8	6
5	Flat Washer, M8	6

TSB366-AF1:


#	Description	Qty.
1	36" x 6" Benchtop	1
2	Adjustable Legs, collapsible	2
3	Socket Head Shoulder Screw, M8 x 20 mm	6
4	Split Washer, M8	6
5	Flat Washer, M8	6

SCOUT 36 SAWHORSE (Applicable to TSB366-F1 and TSB366-AF1)

ASSEMBLY INSTRUCTIONS

1. Place the 36" x 6" Sawhorse Top Plate & Beam upside down on a stable surface.
2. Align each foldable leg with the bracket mount holes.
3. Insert the bolts through the leg hinges and brackets.
4. Secure with washers and lock nuts.
5. Verify legs fold smoothly and lock into working position.

For TSB366-AF1: Adjust legs to the desired height and lock using the adjustment pins provided.

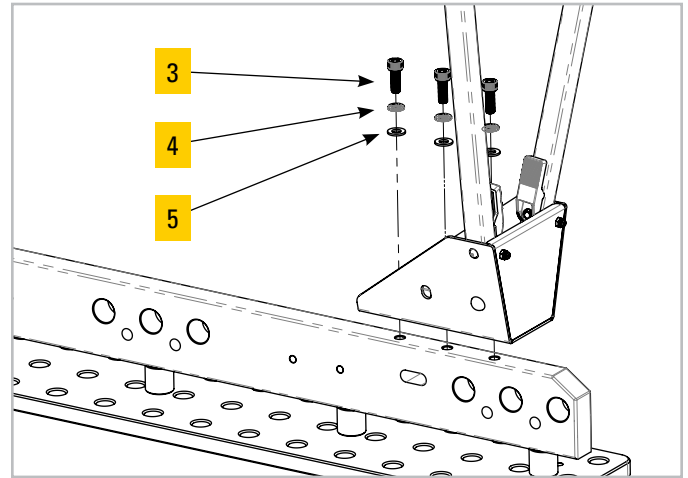

MAINTENANCE

Keep folding and adjustment mechanisms clean and lightly lubricated. Avoid exposing legs to excessive moisture to prevent corrosion. Inspect all fasteners regularly, especially after transport, repositioning, or heavy-duty use. Re-tighten as needed. Keep mounting surfaces clean and free of debris to maintain a stable and flush connection between components. If used in outdoor or humid environments, check for signs of corrosion on hardware and replace any rusted components promptly. **Do not exceed the recommended load capacity of either the benchtop or with legs.**

LIMITED WARRANTY

Each STRONG HAND TOOL product is warranted to be free from defects in material and workmanship. Return to place of purchase for a replacement if warranty applies.

SAFETY

Ensure all bolts, washers, and mounting plates are securely fastened before each use. Never use the table if it feels unstable, wobbles, or shows signs of loose components. Do not sit, stand, or climb on the benchtop. Only use the work surface on a level and stable floor to prevent tipping or imbalance. Use proper PPE (personal protective equipment) such as gloves and eye protection when working with or around the bench. Keep hands and tools clear of adjustment mechanisms while repositioning or tightening bolts.